


Operation Manual

LC-160 Laminate Cutter


Contents in the Box:

- Inner Hex Wrench ----- 1p
- Operation manual ----- 1P
- Warranty card ----- 1P
- Stopper----- 1P
- LC-160 Laminate Cutter ----- 1set

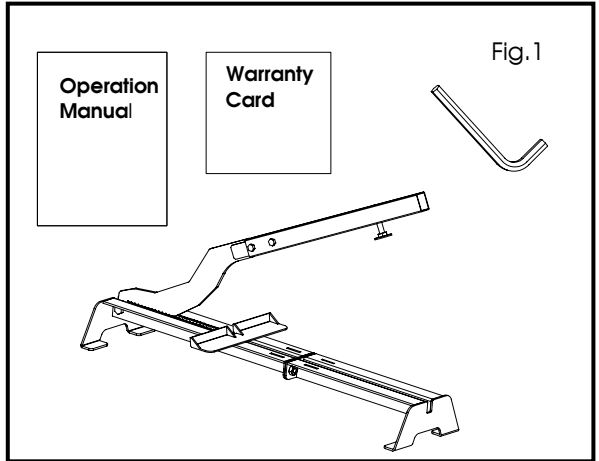


Attach Base

Use provided wrench attach the main pieces together to form the base as show in Fig.2.

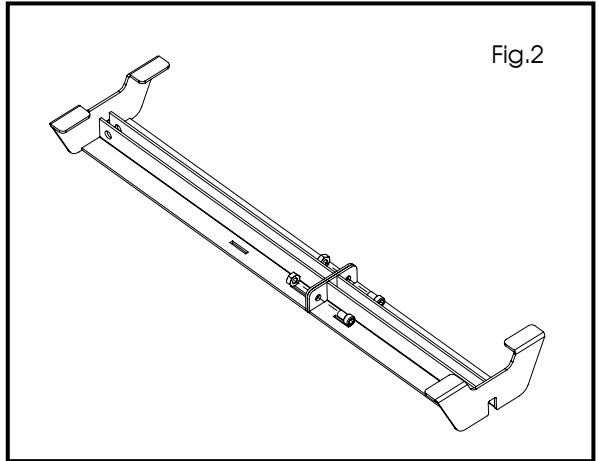

Attach the Blade and Handle


Attach the blade by using the nuts and washers. The two washers on the inside of the frame with the blade between them and tighten the nuts on the outside of the frame so the blade is secure. Attach the handle with the two screws provided, as shown in Fig.3.

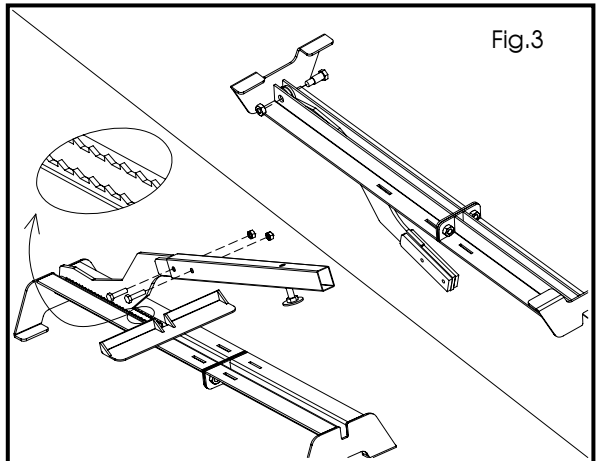

Warning:

Try to avoid contact under the blade on the base where there are sharp edges that may cause injury. See Fig. 3

Fig.4

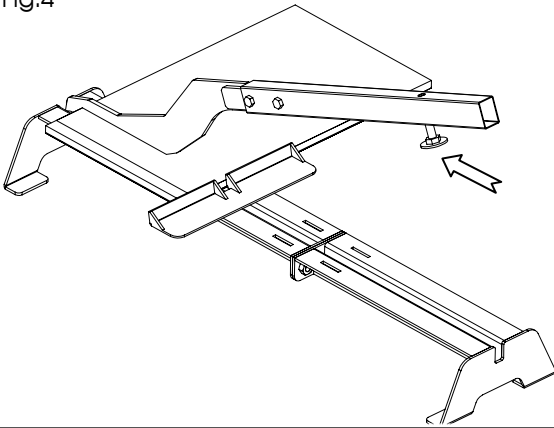


Cut

Insert the material and position the stopper to the length that is needed in the slots as shown in fig 4. Then pull down from the handle until you cut through the material.

Warning:

Adjust the screw to the desired height as shown in Fig.3 to protect your hand from getting injured.


Fig.5

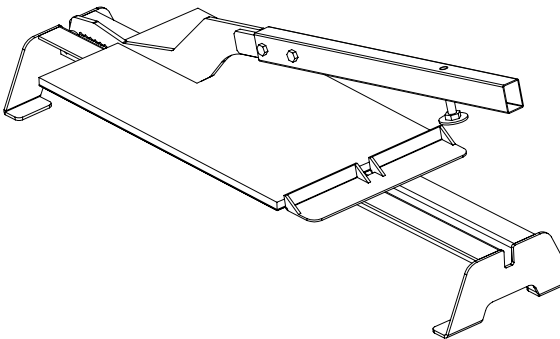

Cut 2

When cutting length wise of the material remove the stopper and place material on base firmly hold material down and pull down the handle. There are small teeth on the base to help support the material from slipping. This is for longer cuts, 90* degree angle cuts and diagonal cuts.

Fig.6

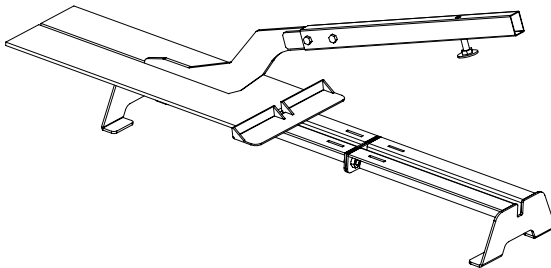

Unlimited Cut

See Cut 2 and Fig. 5 and Fig 6. When cutting lengthwise and its longer than 8 inches, pull down handle to cut then pull up and slide material to the edge of the blade and pull down again. Repeat these functions until cutting length is complete.

Trouble shooting:

1. Material is not staying in place when cutting
 - a. Check if stopper is in place properly
 - b. Check material to see if it has an underlayment so the teeth will grab the material

2. Handle wont move when I tried to pull it down
 - a. Check if material is placed on the base properly
 - b. Make sure all left over material that was in the slot is clear out properly.

3. Handle is to loose or wobbles
 - a. Check outside nuts are tighten properly before use
 - b. Make sure washers on in place inside the base of the tool

*Problem still exists contact your authorized D Cut Service Center

ENVIRONMENTAL PROTECTION



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local Authority or retailer for recycling advice.

D CUT PRODUCTS, INC.
1041N. Lombard Road
Lombard, IL 60148 USA
Tel: 630-916-9100 Fax: 630-916-9101
Email: sales@dcutproducts.com
www.dcutproducts.com

