

AeGIS 7000 SERIES QUICK REFERENCE GUIDE

LOCAL PROGRAMMING

- 1) PRESS 0 AND # SIMULTANEOUSLY THEN RELEASE**, the display screen stops scrolling (If the display screen is still scrolling repeat this step again) then enter the valid 4-digit Master Code (default Master Code: 0000). Now, you are in programming mode and see table below to continue.
- 2) IF YOU DO NOT HAVE A VALID MASTER CODE**, open the panel (key must be used) then press and release the "RED BUTTON" on the board and the display shows: **x x x x: 4-digit Master Code**, then press #. Now, you are in programming mode and see table below to continue.

REMOTE TOUCH-TONE PROGRAMMING

1) SINGLE SYSTEM

Step 1 Call the AeGIS 7000. When the system answer you will hear: • **One Short Beep**: Door is opened; • **Two Short Beeps**: Door is closed. Then Press # key

Step 2 Press your valid Master Code.

- If your Master Code is accepted, you will hear **Two Short Beeps** and now, you are in the programming mode and see table below to continue
- If your Master Code is rejected, the system will disconnect.

2) MULTI-SYSTEM IN SINGLE TELEPHONE LINE

Step 1 Call into the AeGIS 7000 using a touch tone phone. When the system answer

you will hear: • **One Short Beep**: Door is opened; • **Two Short Beeps**: Door is closed; • **One Long Beep**: Combination of Closed and open.

Step 2 Press the System Number you want to log in (1-8) then press # key.

Step 3 Press your valid Master Code.

- If your Master Code is accepted, you will hear **Two Short Beeps** and you are in the programming mode and see table below to continue.
- If your Master Code is rejected, the system will disconnect.

Step 4 Follow the next programming sections below to program the tenant database and parameter.

SYSTEM'S OPERATION

TO PLACE A CALL FROM THE AeGIS 7000 SERIES: • Press 3 to scroll the tenant name from A to Z. or Press 6 to scroll the tenant name from Z to A, then press #.

TO PLACE A DIRECT CALL: Press # , wait for a dial tone then press the 2, 3 or 4 digit directory number.

TO GRANT ACCESS TO VISITOR: Press 9

TO DISABLE REMOTE ACCESS: See Function Code 77.

TO USE THE 4-DIGIT ACCESS CODE: Press * then the 4-digit code.

TO EXTEND THE TALK TIME: Tenant must press the # after the time-out warning beep, the talk time will be extended to another cycle.

TO CALL INTO THE AeGIS 7000 SERIES: Dial the AeGIS phone number, you hear "ONE SHORT BEEP" if you are connected then press * to communicate with the visitor and press 9 to unlock the door.

KEYPAD LAYOUT



See manual for more detail

FUNCTION CODE TABLE

CODE	DESCRIPTION	CODE	DESCRIPTION
*	Exit the programming (local programming) or clear the existing field	46	System Information.
#	To accept program.	50	Clear the Memory to Factory default.
00	Replace System Master Code.	70	Change Talk Time (default is 60 seconds).
01	Program a New Tenant.	71	Change Door Open Interval (default is 12 sec).
02	Modify an Existing Tenant Directory.	72	Change Lock Out Count (default is 3 times).
03	Delete an Existing Tenant Directory.	73	Select Tone and Pulse Dialing (default is tone).
04	Clear All Tenants Directory.	74	Enable or Disable Auto Answer (default is enabled)
05	Manual Lock (open) or Unlock (close) Door.	75	Turn On or Off Key Press Beep (default is On).
06	Selecting Directory Digits (2, 3, or 4-digit, default is 3-digit).	76	Turn On or Off Speaker Beep. (default is On).
07	Single or Multi Systems (default is single).	77	Enable or Disable Remote Access (default is enabled).
08	System Number (default is 1).	78	View Directory by Name.
10	Edit Welcome Screen.	91	Exit from Remote Programming.