

AeGIS 8000 Series Heater Pad Installation (AHP5)

Specifications: 12 VAC 10 Watts
55.4°F ± 3°F or 13°C ± 3°C

NOTE: If you install the AHP5 after you purchased the AeGIS 8000 Series, turn the system OFF and install a Heater Pad behind the LCD with ¼" - ½" clearance. Install a Duct Tape on the LCD's Ribbon Cable. **DO NOT INSTALL THE AHP5 ON TOP OF THE LCD.**



