

AeGIS NPB7000 SERIES QUICK REFERENCE GUIDE

LOCAL PROGRAMMING

- 1) PRESS 0 AND # SIMULTANEOUSLY THEN RELEASE**, the display screen stops scrolling (If the display screen is still scrolling repeat this step again) then enter the valid 4-digit Master Code (default Master Code: 0000). Now, you are in programming mode and see table below to continue.
- 2) IF YOU DO NOT HAVE A VALID MASTER CODE**, open the panel (key must be used) then press and release the "RED BUTTON" on the board and the display shows: **x x x x: 4-digit Master Code**, then press #. Now, you are in programming mode and see table below to continue.

SYSTEM'S OPERATION

- TO PLACE A CALL FROM THE AeGIS 7000NC MAIN LOBBY CONTROL PANEL:**
- Press 3 to scroll the tenant name from A to Z. or Press 6 to scroll the tenant name from Z to A, then press #.
- TO PLACE A DIRECT CALL FROM THE AeGIS 7000NC MAIN LOBBY CONTROL PANEL:**
- Press # , wait for a dial tone then press the 2, 3 or 4 digit directory number.
- TO GRANT ACCESS TO VISITOR:** Press 9.
- TO USE CALL WAITING:**
- Press 0 to HOLD the existing call or to switch the two calls.
- DISTINCTIVE RINGING:**
- Tenant will hear a distinctive ringing if the call comes from the NPB7000 Series.
- TO DISABLE REMOTE ACCESS:** See Function Code 77.
- TO USE THE 4-DIGIT ACCESS CODE:** Press * then the 4-digit code.
- TO EXTEND THE TALK TIME:** Tenant must press the # after the time-out warning beep, the talk time will be extended to another cycle.

KEYPAD LAYOUT

See manual for more detail



FUNCTION CODE TABLE

CODE	DESCRIPTION	CODE	DESCRIPTION
*	Exit the programming (local programming) or clear the existing field	50	Clear the Memory to Factory default.
#	To accept program.	70	Change Talk Time (default is 60 seconds).
00	Replace System Master Code.	71	Change Door Open Interval (default is 12 sec).
01	Program a New Tenant.	72	Change Lock Out Count (default is 3 times).
02	Modify an Existing Tenant Directory.	74	Enable or Disable Auto Answer (default is enabled)
03	Delete an Existing Tenant Directory.	75	Turn On or Off Key Press Beep (default is On).
04	Clear All Tenants Directory.	76	Turn On or Off Speaker Beep. (default is On).
05	Manual Lock (open) or Unlock (close) Door.	77	Enable or Disable Remote Access (default is enabled).
06	Selecting Directory Digits (2, 3, or 4-digit, default is 3-digit).	78	View Directory by Name.
10	Edit Welcome Screen.	91	Exit from Remote Programming.
46	System Information.		