

HF-2 Info Series

Handsfree Telephone Entry / Emergency Autodialer



INSTALLATION and OPERATIONAL INSTRUCTIONS

(Firmware Revision #012102 'C' HF2_INFO)

Emergency button w/ 5# rollover, Information button w/ 2# rollover



1220 N. Batavia • Orange, CA 92867
(714) 633-7442 • Facsimile (714) 633-7567

April 30, 2002

TABLE OF CONTENTS

INTRODUCTION	3
PRODUCT OVERVIEW	3
MOUNTING	4
WIRING	4
WIRING DIAGRAM	5
PROGRAMMING INFORMATION	6
General Programming Information	6
Autodialed Numbers	6
Site ID Number	6
Entering Program Mode	6
Setting Information and Emergency Telephone Numbers	6
Setting the Site ID Number	6
Changing Program Access Number	6
Setting the Relay Duration Timer	7
Setting Incoming Ring Count	7
Setting Dial Mode	7
Setting Call Length	7
DTMF Echo Test	7
Cycling Relays	7
OPERATION	
Answering a call from the HF-2	8
Calling the HF-2 to Grant Access	8
TROUBLE SHOOTING GUIDE	
General	9
CONDENSED GUIDE TO USE and PROGRAMMING	
Security Dept. Operation	10
Standard Mode	10
Programming the Unit	10

INTRODUCTION

This manual contains all the information required to install and program the TRIGON HF-2. If you are using this manual to install this unit, it is very important to read all the sections in order.

You should read these instructions before you begin installation. This will insure that everything is done efficiently.

If you are using this manual as a programming guide after the initial installation, you may find the TABLE OF CONTENTS useful in locating the particular programming procedure you need.

PRODUCT OVERVIEW

The TELALARM HF-2 Two Button is a multi-number auto dialer. Upon pressing the 'Information' button, the HF-2 dials a programmed telephone number. If the number dialed is busy or does not answer, the HF-2 will hang up and dial the second programmed number. If the last programmed number is busy or does not answer, the HF-2 will rollover and start the dialing process again with the first phone number.

Upon pressing the 'Help' button, the HF-2 dials the first programmed telephone number. If the number dialed is busy or does not answer, the HF-2 will hang up and dial the second programmed telephone number. If unanswered the HF-2 will continue dialing up to five numbers.

The HF-2 comes standard with one output relay. This relay is programmed to stay latched on for the duration of a "HELP" call in order to operate a remote strobe light.

A Site I.D. code feature provides for unit identification. The Site I.D. code is a programmable four digit code that is transmitted by the HF-2 when it receives a command from the called party. This code, when interpreted by a Trigon DTMF Decoder, will identify the calling unit.


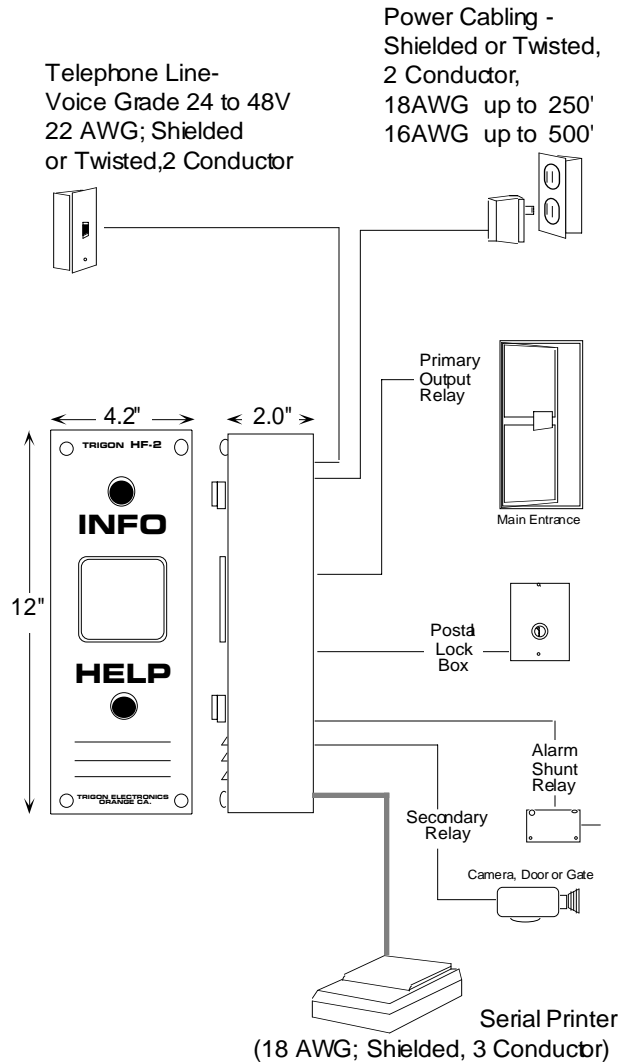


Figure 1

MOUNTING

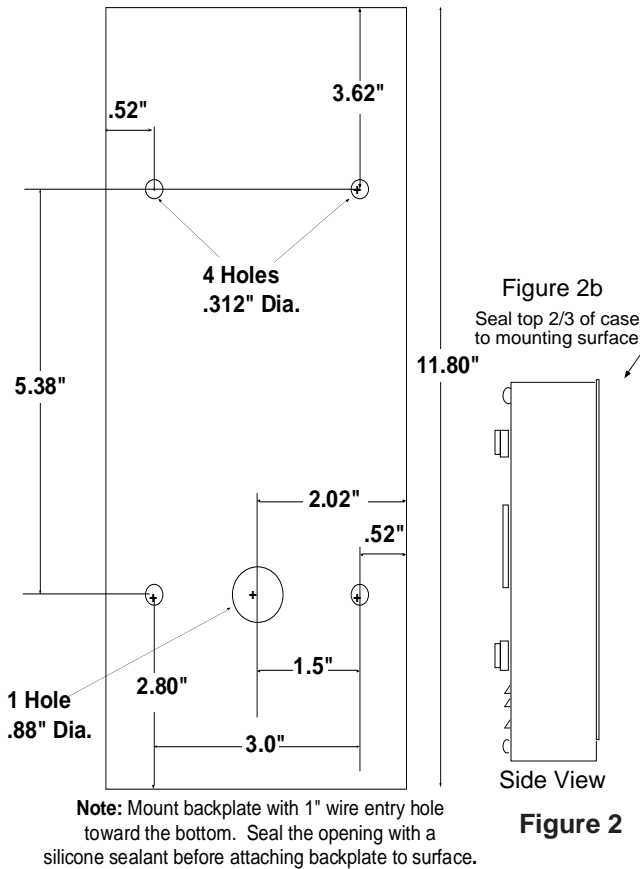

Arrangements must be made with the local telephone company for installation of a standard voice-grade telephone line (touch-tone or rotary) as close to the unit mounting location as possible. The telephone company may require the following information.

FCC Registration No.....1Z8898-62546-DI-T
 Ringer Equivalence.....0.8B
 Connector.....Terminal Block

The unit is designed to be as weather resistant as possible. We do however recommend some shelter from direct rain and sunlight. An overhang is usually sufficient. Bolt the back plate (**Fig. 2**) to the mounting surface using the four .312" holes in the chassis. Feed the wiring through the access hole in the rear of the back plate. At this point, the wiring should NOT be live (energized).

Note: If used in extreme weather, a bead of silicon sealant should be run around the outside top two thirds of the unit, after the front case is secured.

(Fig. 2b).


WIRING

1. Use the wiring diagram (Fig. 3) for wire connection information.
2. Do not power any other device from the Trigon's 12 VAC transformer. If a substitute transformer is used, be sure it is rated 12 VAC, 40VA, UL Class 2 listed. The 12 VAC input power wires should be 18AWG, 600V, insulated wire. This should be sufficient for distances up to 200 feet.
3. Do not energize wires until installation is completed.
4. Ground the unit by attaching a separate 12 AWG ground wire to the ground location on the terminal block. This ground wire should go to a grounding rod or grounded metal conduit.
5. Trigon recommends that an EMI filter (Cornell-Dubilier Model APF 1021 or equivalent) be mounted between the 12 VAC transformer output and the unit. EMI/RFI filters are available from Trigon. Mount the filter as close to the unit as possible. Ground the filter to the same point as unit ground.
6. Shielded cable is recommended. Ground the shielding to the same point as the unit and filter. To

avoid ground loops, do not ground the shield at both ends. Use 600V insulated wire for this installation.

7. Isolate the Telco phoneline from 12 VAC power wires. This will prevent 60 Hz hum from occurring on the phoneline. Use 22 AWG wire on Telco line run distances of up to 2400 feet. Consult the factory for distances greater than 2400 feet.
8. Power Relays 1 and 2 are dry contact, Form C type, rated for 5 AMPS @ 30 VDC/ 250VAC.
9. The Shunt relay is a low-power (4 watt) reed relay. It can be used for temporary alarm switch bypass, video camera activation, etc. The Shunt relay activates with the #1 or #2 power relay, and deactivates thirty seconds after relay release.
10. Connect printer wiring to the RS-232 port (Printer IN to RS-232 OUT, Printer BUSY to RS-232 DSR, Printer COM to RS-232 COM).
11. If all wiring and grounding is completed, mount the faceplate onto the backbox.

WIRING DIAGRAM

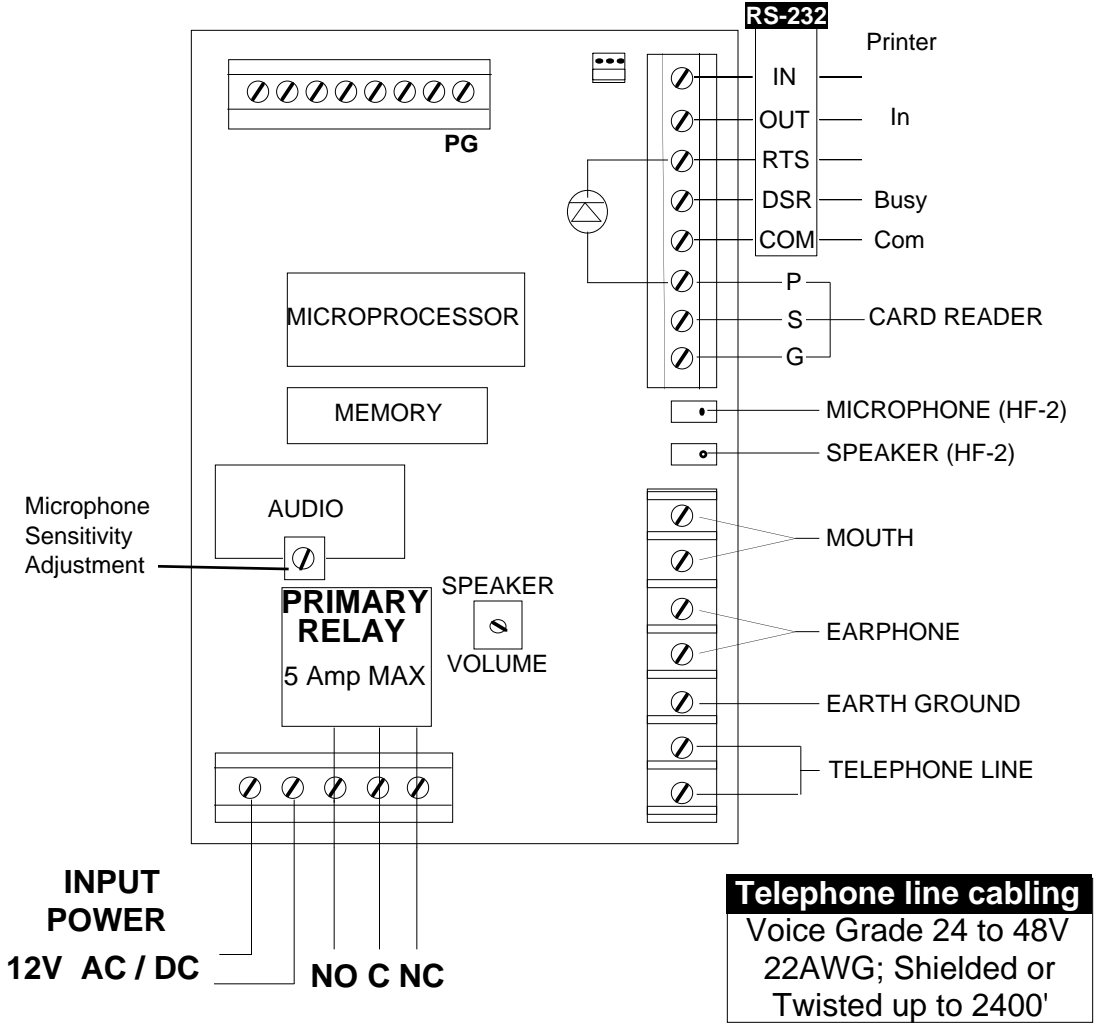

Telephone line cabling
 Voice Grade 24 to 48V
 22AWG; Shielded or
 Twisted up to 2400'

Input power cabling	
0-250'	18 AWG; Shielded
250 to 500'	16 AWG; Shielded
500' +	14 AWG; Shielded

TELALARM HF-2

Figure 3

PROGRAMMING INFORMATION

General Programming Information

The "Initial Setup" for the HF-2 has been programmed at the factory. These factory default settings may be changed to better suit your particular application. If you decide to alter these settings, follow the instructions below. It is important that each programming step be taken in order. When reprogramming a specific feature, you must always enter the programming mode first. You may then go to the appropriate procedural steps for the changes desired.

Record below the autodialed numbers to be programmed into the HF-2.

NOTE: This symbol:  resents response tones sent from the unit while programming.

Site I.D. number

Autodialed Numbers

Primary Emergency Number (16 digit max)

Second Emergency Number (16 digit max)

Third Emergency Number (16 digit max)

Fourth Emergency Number (12 digit max)



Fifth Emergency Number (16 digit max)

First Information Number (16 digit max)

Second Information Number (16 digit max)













PROGRAMMING

(A) To Enter Program Mode:





1. Call the telephone number of the unit.
2. Listen for the two second tone.
3. Enter '#' then the unit's Program Code  .
4. If desired, exit Program Mode by pressing '#' (wait for two second tone).
5. To terminate call, press '7'.

If the unit is new, use the preset factory code. **(Factory code is 9753).**

(B) Setting the Information and Emergency Telephone Numbers:

1. Unit must be in Program Mode.
2. Press '2' then '1'  and enter the first Emergency Phone Number. Press '#' when complete  .
 Press '2' then '2'  and enter the second Emergency Phone Number. Press '#' when complete  . Repeat for up to five Emergency Phone Numbers.
 Press '2' then '9'  and enter the first Information Phone Number. Press '#' when complete  .
- Press '2' then '0'  and enter the second Information Phone Number. Press '#' when complete  .
3. To terminate call, press '7'.





(C) Setting the Site ID Number:

1. Unit must be in Program Mode.
2. Press '1'.
3. Enter a four digit number     .
4. If desired, exit Program Mode by pressing '#' (wait for two second tone).
5. To terminate call, press '7'.

This number identifies the unit upon request from a central office.

(D) Changing Program Access Number:

This will change the factory preset number of '9753'.

1. Unit must be in Program Mode.
2. Press '3'.
3. Enter a new four digit number     .
4. If desired, exit Program Mode by pressing '#' (wait for two second tone).
5. To terminate call, press '7'.

PROGRAMMING, Cont.

(E) Setting the Relay Duration Timer:

This will set the length of time the Primary and Secondary relays remain activated. The duration can be set from 1 to 45 seconds.

The duration is set by entering the number of five-second intervals desired (2= ten seconds).

1. Unit must be in Program Mode.
2. Press '0'.
3. Enter the number of 5 sec. intervals required.
☎☎.

4. If desired, exit Program Mode by pressing '#' (wait for two second tone).
5. To terminate call, press '7'.

Note: If '0' is entered in step 3, relays will pulse for one second.

(H) Setting Incoming Ring Count:

Entering a digit value of 1 to 9 will set the number of rings the unit will count before answering an incoming call.

1. Unit must be in Program Mode.
2. Press '5'.
3. Enter the number of rings desired (1 to 9).
or
4. Enter '0' if an audible ring is desired from the HF-2 whenever it is called ☎☎.
5. If desired, exit Program Mode by pressing '#' (wait for two second tone).
6. To terminate call, press '7'.

Note: If '0' was programmed for an audible ring, the call may be answered by pressing the INFO' button on the face of the unit.

(F) Setting the Dial Mode.

This will select Rotary or Touch-Tone dialing.

1. The unit must be in Program Mode.
2. Press '6'.
3. Press '1' for Rotary.
or
4. Press '0' for Touch-Tone ☎☎.
5. If desired, exit Program Mode by pressing '#' (wait for two second tone).
6. To terminate call, press '7'.

Note: Adding 2 to the above value will result in the Secondary relay closing for three seconds at dial time.

(G) Setting Call Length:

This is the period of time allowed for conversation before time-out. The time desired is measured in seconds, and entered using a 3 digit number. (060= 1 minute, 180= 3 minutes, etc).

1. Unit must be in Program Mode.
2. Press '8'.
3. Enter call length in seconds (001 to 999) ☎☎☎.
4. If desired, exit Program Mode by pressing '#' (wait for two second tone).
5. To terminate call, press '7'.

(H) DTMF Echo Test:

1. Press '9'.

The unit will send a tone sequence 1 thru 0, *, #, and then echo any tones received from the caller.

2. To stop test. press '#' (wait for two second tone).
3. To terminate call, press '7'.

(I) Cycling Relays:

This command causes the HF-2 to leave the programming mode and operate the primary relay timing cycle followed by phone line disconnect.

1. Press '* '.

OPERATION

When a CALL button is pressed, the HF-2 dials a pre-programmed phone number and monitors the line for the following signals:

Busy Signal: *The HF-2 will hang up and redial the number after approximately three busy tones.*

Ring Signal: *The HF-2 will hang up and redial the number after approximately six unanswered rings (36 seconds).*

Voice or Touch-tones: *This indicates an answer. The unit then enters the Talk Mode.*

Answering the Call From the HF-2

Answer the HF-2 incoming call with a short phrase **at least 3 seconds long**. The unit may fail to recognize a short greeting such as "Hello" and may not turn on the microphone.

Once voice communication has been established you may then press keys on your touch-tone telephone to do any of the following:

1. To **Activate the Primary Relay** and hang up after time-out, press '0' or '5'.

2. To **Activate the Secondary Relay** and hang up after time-out, press '1' or '6'.

Note: Activating either power relay will simultaneously activate the alarm shunt relay for the relay activation time plus an additional thirty (30) seconds.

3. To **Terminate the Call**, press '7'.

4. To **Reset the HF-2's Call Length Timer**, press '8'.

Note: The unit will beep twice to warn of auto-call termination in 10 seconds.

5. To **Toggle on/off the Secondary Relay**, press

6. To **Retrieve the HF-2's Site ID number**, press #.

7. To **Enter the Program Mode**, press ' * ', followed by the four digit Programming Code.

Calling the HF-2 To Grant Access

When a call is placed to the HF-2, the caller can perform any of the above operations with the following exceptions:

1. To **Enter the 'Talk' Mode**, press '2' or any of the above tones.

2. To **Activate the Primary Relay**, press '0' or '5'. You will hear one beep. Enter your four digit Program Code. The relay will activate for the preset cycle duration, and providing 1 beep per second until the end of the cycle.

3. To **Activate the Secondary Relay** and hang up after time-out, press '1' or '6'.

Note: If the wrong Program code is entered, the unit will immediately hang up. If the program code or other information is not entered completely, the HF-2 will time-out and hang up.

TROUBLE SHOOTING GUIDE

NO DIAL TONE

1. Check input power at unit. Should be 12 VAC.
2. Check that unit is properly grounded to a good Earth ground.
3. Current starved. Increase AC input wire size.
4. Remove power, wait 5 seconds, restore power. Check for dial tone.
5. Check for phone line. Should be 48-52 VDC across phone line terminals (on hook).
6. Check VOLUME adjustment on PC board.
7. Check "SPKR" plug on PC board. Make sure speaker is properly plugged in (Handsfree units).
8. Verify that contacts and wires are clean and tight.

CANNOT PROGRAM

1. Incorrect/lost program code.
2. Not entering ' * ' before program code.
3. Try 'NO DIAL TONE' troubleshooting procedures.
4. Check that Program Prom/Microprocessor is fully seated.
5. Unit is in the wrong Operational Mode

LOSES MEMORY

1. Electrical noise on power line. Install EMI/RFI filter.
2. Excessive electrical noise from strike. Use low current strike.
3. Unit transformer shared with another device (i.e. door strike).

RESIDENT CANNOT ACTIVATE STRIKE/GATE

1. Tenant not pressing correct number on phone.
2. Strike/gate operator not wired correctly.
3. Missing or incorrect power to strike or gate operator.
4. Current starved. Increase wire size.
5. Tone may be too brief in duration (cordless phones, etc.).

AC HUM IN SPEAKER

1. Phone wires running in same conduit as AC power.
2. Unit not properly grounded.
3. Defective microphone.

RESIDENT CANNOT HEAR VISITOR

1. Defective handset/microphone.
2. Person receiving the call answers in too short a duration to activate the HF-2 (person must speak a minimum of 2 seconds to be detected).
3. Excessive background noise.

CONDENSED GUIDE TO USE and PROGRAMMING

General

Data between [] is a mandatory program key stroke sequence. Data between { } is to be supplied by the programmer. Unit responses are shown between ().

Legend:

d	Dial mode (0= Touch, 1= Rotary)‡	pppp	Program Code
f	Five second relay duration time (1, 2,...9)	r	Ring Count (1, 2, ...9)
iiii	Site ID number (always use four digits)	*	The “star” key of the telephone
lll	Call Length Time in seconds (001, ...999)	#	The “pound sign” key of the telephone
nnn nnnn	Phone Number (up to 12 digits)	☎	Tones returned by the unit

SECURITY DEPT. OPERATION

When Security personnel receive a call from the unit, they press key [X] on their telephone to:

STANDARD MODE

- [0,5] Cycle Primary Relay
- [1,6] Cycle Secondary Relay
- [2] Factory Tone Test (answer tone)
- [7] Force disconnect (hang up)
- [8] Extends current Call Timer 3 minutes
- [9] Toggle on/off Secondary Relay (☎ = off, ☎☎ = on)
- [#] Requests Site ID Number
- [*{pppp}] Enter Program Mode

PROGRAMMING THE UNIT

Enter the Programming Mode: Call the unit, then press [{pppp}] ☎☎*

- [0{f}] ☎☎ Set unit’s Gate Open time
- [1{iiii}] ☎☎ Set unit’s Site ID number
- [2 then 1-0] ☎ [nnn nnn#] ☎☎ Set unit’s Auto dial numbers
- [3{pppp}] ☎☎ Set unit’s Program Code
- [5{r}] ☎☎ Set Ring Count before auto answer
- [6{d}] ☎☎ Set Dial Mode‡
 - ‡ Dial Mode
 - 0 = Tone dial only
 - 1 = Rotary dial only
 - 2 = Tone dial with Secondary Relay pulse
 - 3 = Rotary dial with Secondary Relay pulse
- [7{x}] ☎☎ Set Operation Mode, where x = :
 - 0 = Standard mode
 - 1 = Emergency mode
 - 2 = Multiple HF-2’s share same phone line
 - 4 = Ring Down mode (Seizes phone line, waits)
- [8{lll}] ☎☎ Set Call Length Time Limit
- [9(tones)#] Echo Test.
- [*] then 1-0] Verifies primary or backup telephone numbers
- [#] Return to Normal Mode

