

Talk-A-Phone Co.

Creating Communication Solutions

Installation & Operation Manual

For

EB-100 Base Station

Section	Page
Getting Started	2
Hardware Installation	3
Operation	4
FCC Information	5
Phone Line Specifications	6
Information to the User	7
Talk-A-Phone Co. Limited Warranty	8

Talk-A-Phone Co.

5013 North Kedzie Avenue Chicago, Illinois 60625-4988
Phone: (773) 539-1100 Fax: (773) 539-1241
e-mail: info@talkaphone.com <http://www.talkaphone.com>

Rev. 10/10/00

Getting Started

I. Getting Started

A. Introduction

Thank you for your purchase of this Model EB-100 Base Station. This unit is built with an exceptional standard of quality and should provide years of reliable service.

This manual will guide you through the installation of this unit and provide comprehensive operating instructions. Please read this instruction manual COMPLETELY before you install this unit.

Once you have installed the unit and are familiar with its operation, store this manual in an accessible location for future reference.

B. What Is In The Box

- One Base Station
- One Power Supply
- One Instruction Manual

You should inspect your Base Station when you open the box for possible damage in shipment. If it is damaged, or any of the components are missing, contact your Talk-A-Phone Co. distributor immediately. Do not discard any hardware or packing material before you are certain you have all the items listed above, and the unit is installed and functioning correctly.

C. Technical Requirements

In order to report an incoming Emergency Phone call, the EB-100 must "hear" the DTMF tones that are transmitted by all Talk-A-Phone Emergency Phones.

For most applications, the Base Station will be in series with the phone line so that it will automatically hear the tones as soon as the incoming call is answered. However, in certain applications, the EB-100 will be connected in parallel with the phone handset. In this case, be sure that the volume is not turned down on the handset or the EB-100 will not detect an incoming call.

Any significant noise on the telephone line will also interfere with the functioning of the EB-100.

If you are planning on connecting the EB-100 to a digital phone line, be sure to read the Special Instructions for Using a Digital Phone Line.

II. Hardware Installation

A. Connecting the Base Station

Plug the RJ11 male connector from the incoming phone line into the RJ11 connector marked "Line" on the rear of the Base Station. Plug the RJ11 male connector on the phone cable coming from the guard or attendant phone into the RJ11 female connector marked "Phone" on the rear of the Base Station.

B. Connecting the Power Supply

Plug the cable with the male jack extending from the Power Supply into the female power receptacle marked "POWER" on the rear of the Base Station. Now plug the Power Supply into a 120 volt 50-60 Hz AC Electrical outlet. LED's in the ID Number Section on the front of the Base Station will light with dashes to show that power is being supplied.

C. Special Instructions for Using a Digital Phone Line

If you are using a digital phone line, you must connect the Base Station in parallel with the phone handset instead of in series with the phone line (see Figure 1). In addition, you will have to have a jumper connected on the bottom of the Base Station (see Figure 2).

1. Plug a male RJ11 splitter into the LINE port in the Base Station.
2. Unplug the phone cord from your handset and plug it into one of the female ports on the RJ11 splitter.
3. Plug another cord into the second port of the splitter with the other end going into the handset.
4. You may already have the required jumper connected to your base station. Once the rest of the installation is complete, test out the EB-100 to see if the LED's light when you receive a call. If they do not, then you must connect the jumper as shown in Figure 2.

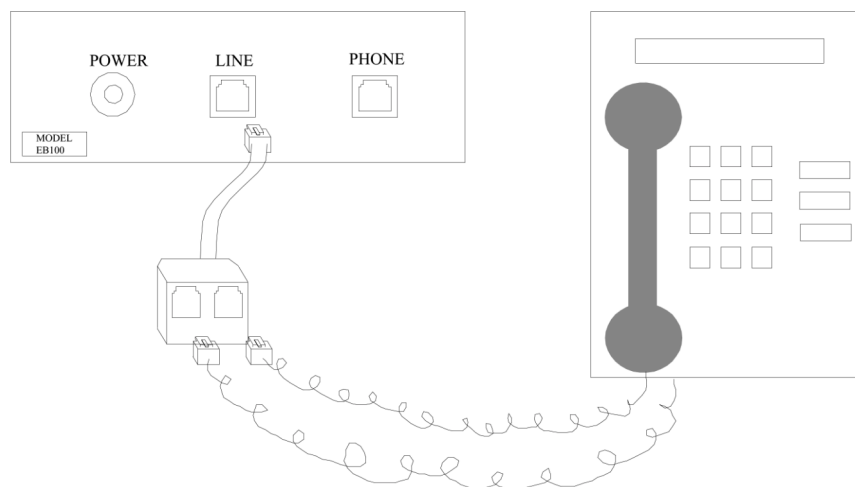


Figure 1. Connecting the Base Station to a digital phone handset

Operation

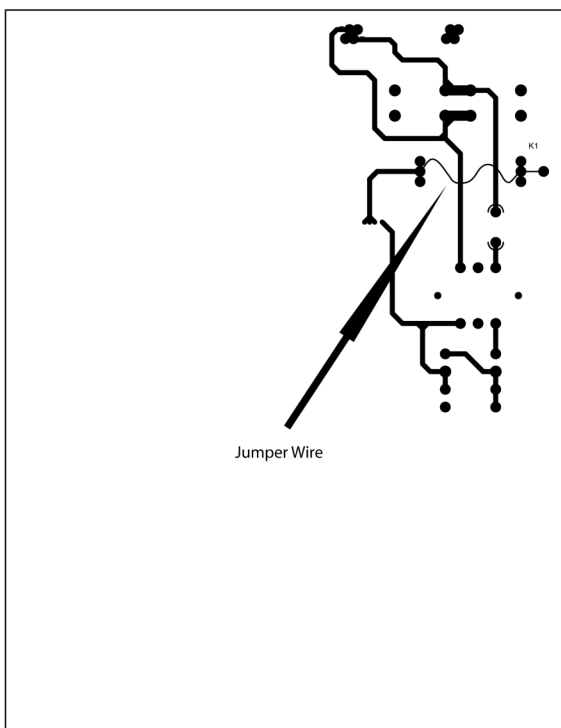


Figure 2. Connecting the jumper on the base station

IV. Operation

When a call is received from an Emergency Phone or an Emergency Phone is called from the phone that is connected to the Base Station, the 6-digit identification number that has been programmed into the Emergency Phone will display in the ID Number Section on the front of the Base Station Unit. A code entered as "1" would be displayed as "000001". For more information on programming the Emergency Phone's ID code, see page 10 of the Emergency Phone Manual.

In addition, the EB-100 will indicate which button was pushed on a 2-button Emergency Phone (button 1 is the top button, usually EMERGENCY), if an Auxiliary Input was used to activate the phone in lieu of pressing a button and if either of the Auxiliary Outputs were activated (displayed as AUX's 2 and 3).

Note: If a transmission problem affects the reporting of data (such as talking over the DTMF tones or noise on the line), dashes will appear in the ID number section of the Base Station instead of the ID number. You can have the ID Number automatically resent to the Base Station by first holding down the * button on your telephone for 1 second (you should hear one beep, if not try again), then entering *9* on your telephone. Do not speak into the telephone while re-reporting is in progress.

V. Federal Communications Commission Information

This device has been granted a registration number by the Federal Communications Commission (FCC), under part 8 rules and regulations for direct connection to telephone lines. In order to comply with these FCC rules, the following instructions must be carefully read and applicable portions followed completely. These instructions must be provided to the consumer.

- A. This equipment complies with part 68 of the FCC rules. A label located on an outside surface of this equipment contains, among other information, the FCC registration number and ringer equivalence number (REN). If requested, this information must be provided to the Telephone Company.
- B. As indicated below, the suitable jack (USOC connecting arrangement) for this equipment is shown. If applicable, the facility interface codes (FIC) and service order codes (SOC) are shown.
- C. The ringer equivalence number (REN) is used to determine the quantity of devices which, when connected to the telephone line, may result in the device not ringing in response to an incoming call. In most, but not all, areas, the sum of the REN's should not exceed five (5.0). To be certain of the maximum number of devices that may be connected to the line, as determined by the total REN's, contact the Telephone Company to determine the maximum REN for the calling area.
- D. If this equipment (indicated with trade name and model) causes harm to the Telephone Network, the Telephone Company will notify you in advance. If advance notice is not practical, the Telephone Company will notify the customer as soon as possible. Also, you will be advised of your right to file a complaint with the FCC if you believe it is necessary.
- E. The Telephone Company may make changes to its facilities, equipment, operations or procedures that could affect the operation of this equipment. If this happens, the Telephone Company will provide advance notice in order for you to make the necessary modifications needed in order to maintain uninterrupted service.
- F. If trouble is experienced with this equipment, (indicated below with trade name and model, together with a service center in the U. S. A. address and telephone number), contact the manufacturer for repair and/or warranty information. If the trouble is causing harm to the Telephone Network, the Telephone Company may request that you remove the equipment from the Network until the problem is resolved. User repairs must not be made. Doing so voids the warranty.
- G. This equipment must not be used on Telephone Company provided public coin service. Connection to party lines is subject to State Tariffs, (contact your State Public Utility Commission for information). If so required, this equipment is hearing aid compatible (HAC).
- H. The user is cautioned that any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- I. The Talk-A-Phone Co. U. S. A. Service Center is located at 5013 North Kedzie Avenue, Chicago, Illinois 60625-4988, telephone number (773) 539-1100, fax number (773) 539-1241.

Phone Line Specifications

VI. Phone Line Specifications

A. MODE I Operation

The following criteria must be met by a phone line to insure proper functionality of the FCC approved equipment. All voltages use Tip as ground when measuring.

1. On-Hook voltage must be less than or equal to -36 V (-50 V standard).
2. Off-Hook should be recognized in a maximum time of 300 ms.
3. At an Off-Hook voltage of -15 V , the current that is supplied must be no less than 20 mA and no more than 120 mA.
4. Dial tone must consist of 350 Hz and 450 Hz tones at $-17\text{ dB} \pm 0.5\%$.
5. The telephone line must generate Ring-Back consisting of 440 Hz and 480 Hz tones at $-17\text{ dB} \pm 0.5\%$, with a duty cycle of 1.6 seconds on—4.8 seconds off $\pm 10\%$ interrupted at 20 Hz.
6. The telephone line must generate a busy signal consisting of 480 Hz and 620 Hz tones at $-17\text{ dB} \pm 0.5\%$, with a duty cycle of 500 ms on—500 ms off.
7. The telephone line must be able to recognize or send the following frequencies in order to decode or transmit DTMF:
 - a) 685 Hz — 709 Hz Row 1
 - b) 757 Hz — 784 Hz Row 2
 - c) 837 Hz — 867 Hz Row 3
 - d) 925 Hz —957 Hz Row 4
 - e) 1189 Hz — 1229 Hz Column 1 (1, 4, 7, *)
 - f) 1314 Hz — 1358 Hz Column 2 (2, 5, 8, 0)
 - g) 1453 Hz — 1501 Hz Column 3 (3, 6, 9, #)
 - h) 1607 Hz — 1659 Hz Column 4 (A, B, C, D)
8. When dialing, the telephone line should require a minimum tone pulse ON time of 40 ms, as well as a minimum between tone gap of 40 ms.
9. The telephone line should support and match with a 600Ω AC impedance, as well as a DC resistance of $100\ \Omega$ — $200\ \Omega$.

B. MODE II and MODE III Operation

Talk-A-Phone phones can be used with most PBX systems with non-standard dial tones, ring-backs, busy signals and hang-ups.

VII. Information To The User

A. Section 15.105

This equipment has been tested and found to comply with the limits for a Class B Digital Device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and may cause harmful interference to radio communications if not installed and used in accordance to the instructions. However, there is no guarantee that the interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna;
2. Increase the distance between the equipment and the receiver;
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected;
4. Consult the dealer or an experienced Radio/TV technician for assistance.

B. Section 15.21

The user is cautioned that any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

C. Section 15.27

The user is cautioned that any peripheral device installed with this equipment, such as a modem or printer, must be connected with a high-quality shielded cable to insure compliance with FCC limits.

D. Talk-A-Phone Factory Service

Talk-A-Phone factory service is available to Talk-A-Phone users at a reasonable charge, plus transportation to and from our factory. When you send units to our factory, freight prepaid, our technicians will examine, service and promptly return the units to you, transportation collect.

You must receive a Return Materials Authorization (RMA) number to send units in for repair. Contact the Talk-A-Phone Service department for more information.

Talk-A-Phone also sells replacement components for our products directly both to dealers and to our users. When ordering, please give either the component part number or a brief description of the component's function, and the model for which it is needed.

When returning equipment for service or ordering replacement components, please be sure to include your full name, address and telephone number.

Talk-A-Phone Limited Warranty

VIII. Talk-A-Phone Co. Limited Warranty

Talk-A-Phone Co. warrants Talk-A-Phone equipment against any defects in material and workmanship, under normal use, for a period of twelve (12) months from date of installation, provided that Talk-A-Phone receives a completed "Installation Certification" certifying the date on which the system has been installed. An "Installation Certification" card is enclosed with every unit. In the event that no "Installation Certification" is received by Talk-A-Phone, the twelve (12) months will commence on the date of shipment by Talk-A-Phone. The warranty period for Models ETP-PM, ETP-MT and ETP-MT/R is five (5) years, under the same terms and conditions.

In the event this product is found by Talk-A-Phone to be defective within the warranty period, Talk-A-Phone's only obligation and your exclusive remedy shall be the repair and/or replacement of any defective parts, provided the equipment is returned to Talk-A-Phone Co., 5013 N. Kedzie Ave., Chicago, IL 60625. It is expressly understood that Talk-A-Phone shall have no obligation to furnish labor, nor pay for the labor of any third parties, nor bear the expense of shipping defective products for repair. This warranty shall not apply if Talk-A-Phone determines that the defect was caused by improper use or installation, or damage caused to the equipment by others.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.